


Solderless SMA plug connector for SC-086 series

AX-086P/SDLS/NbTi


Solderless SMA plug connectors have been developed for cables made of non-solderable materials (Nb, NbTi etc.).

They can be mounted easily without the use of special tools.

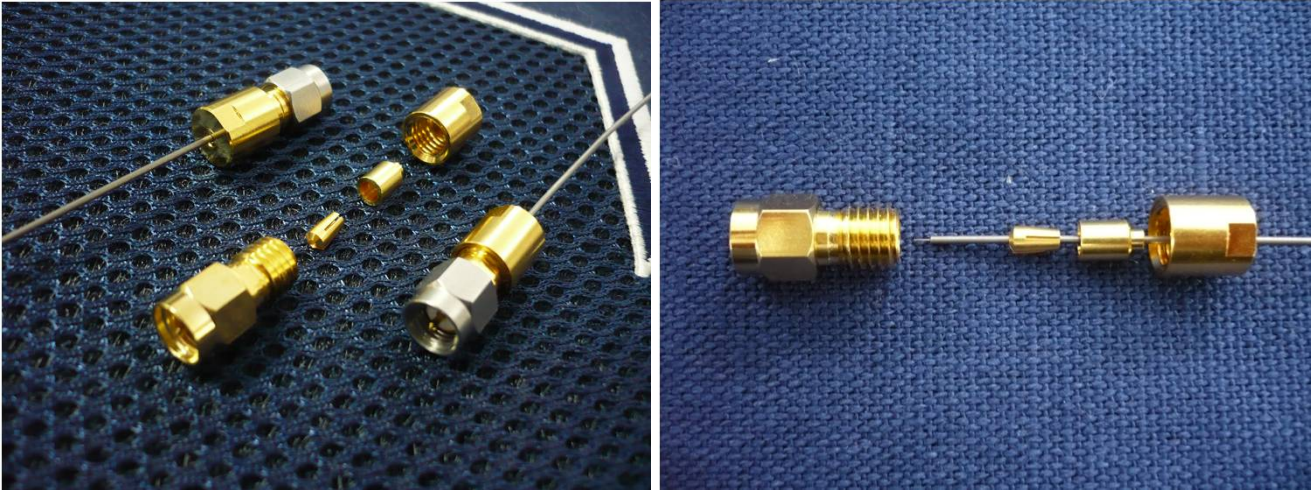


High frequency characteristics


SC-086/50-NbTi-NbTi 200mm with **AX-086P/SLDS/NbTi** connectors on each end.

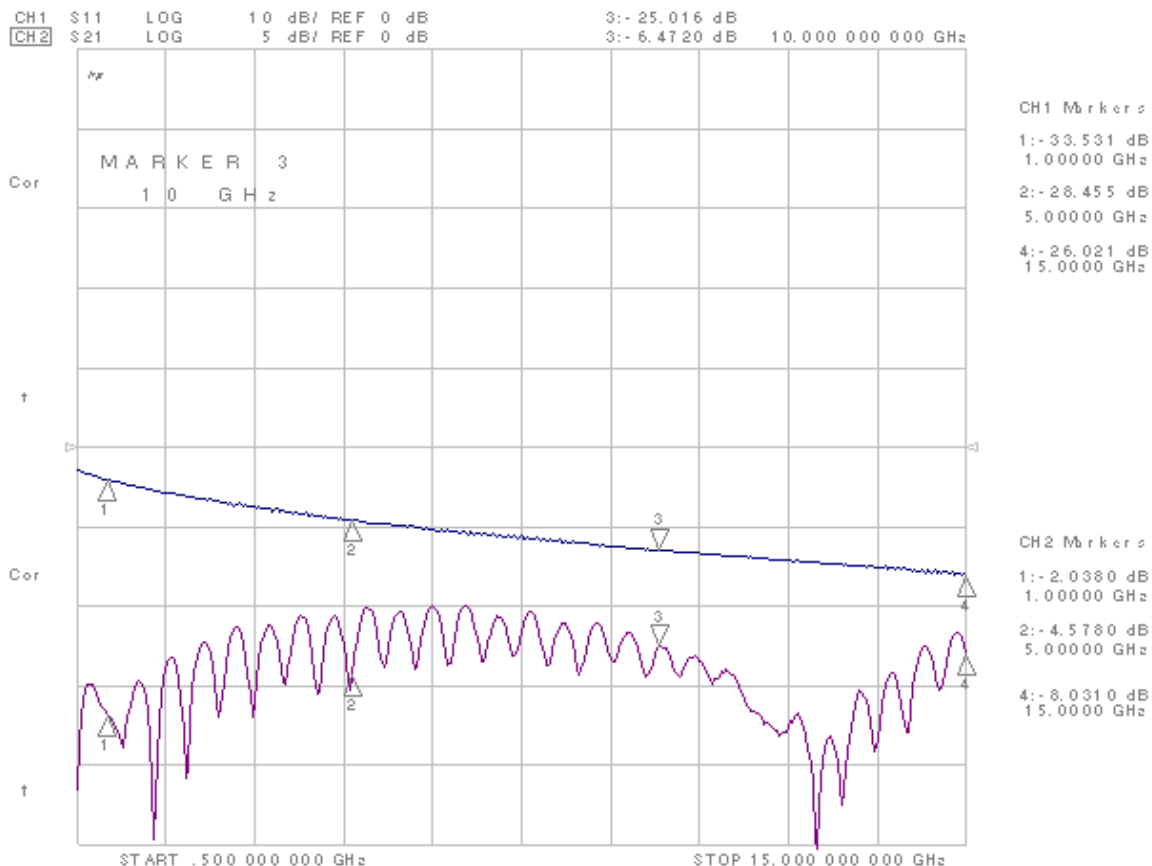

Assembly Instructions

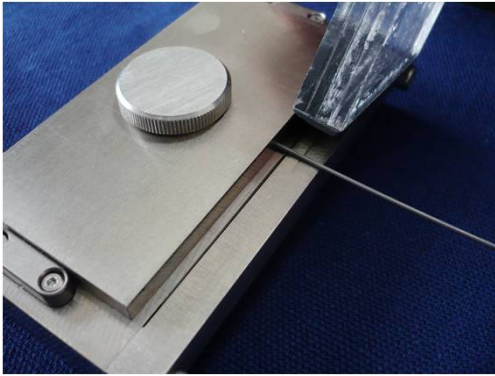

Trim outer conductor and dielectric of the cable.

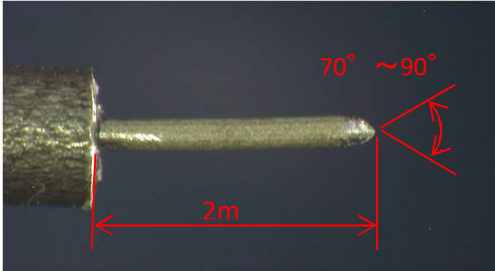


Chamfer the end of the center conductor.



Slide 3 parts on the cable.



Insert center conductor straight and slowly into center contact.

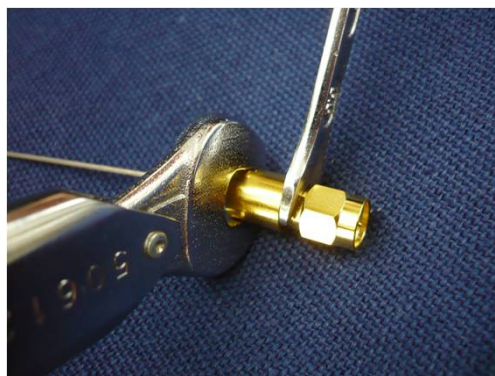

Slide 3 parts toward body and tighten.